

# Oz Scale Racers

## How to set Debounce value in Race Coordinator

### Step 1:

- Ensure that you have Race Coordinator version 1.9.x.x installed on your track computer
- Ensure that you have uploaded the lapCounter sketch version 1.0.0.8 (or later) to your Arduino track interface

### Setting the Debounce value

1. Launch Race Coordinator
2. Then from the Race Day Setup screen, select **Track Setup > Expert Track Setup**
3. When the Track Manager screen appears click the **Configure** button
4. Go to the **Debounce Us** field and enter the required value - ( value less than 1000 is best option )
5. Now click the **Accept** button to save your changes and return to the Track Manager screen
6. Now click on the **Update** button to save your changes
7. To return to the Race Day Setup screen, simply click the **X** in the top right corner to close.
8. All Done

