

Oz Scale Racers

How to set Race Coordinator to use Lap Sensors for Pits

Setting the Debounce value

1. Launch Race Coordinator
2. Then from the Race Day Setup screen, select **Track Setup > Expert Track Setup**
3. When the Track Manager screen appears click the **Configure** button
4. Click **Use Laps for Pits** in the Arduino Manage screen
5. Now click the **Accept** button to save your changes and return to the Track Manager screen
6. Now click on the **Update** button to save your changes
7. To return to the Race Day Setup screen, simply click the **X** in the top right corner to close.
8. All Done

